



ALARM QUICK START GUIDE

AVS C-SERIES RANGE: C5, C4, C3

Version: Generation 1, V1263

A full owner's manual is free to download from our website or scan the QR code.



0800 438 862 or 09 476 8052
www.avscarsecurity.com

OPERATING THE ALARM

The alarm is operated from your car's factory remote. This is a guide as to how it will function although your remote buttons may look different.



ARMS the alarm and locks the doors. The siren will chirp once.



DISARMS the alarm and unlocks the doors. The siren will chirp twice.



Opens the **BOOT**.

If the alarm is armed it will disarm the boot circuit and any sensors until the boot is shut and will then re-arm and return to normal.

NOTES

- Not all factory remotes have a boot button.
- Most factory systems will re-arm and re-lock if no door or boot is opened within 30 seconds of a disarm. This can be programmed off by your vehicle franchise.
- Some vehicle's systems can also be operated by the affordable AVS CANREMOTE.

ARMING WITH SENSORS DISABLED

1. Press and hold the override LED button until the LED on the dash starts flashing quickly.
2. Exit the vehicle as normal and arm the alarm.
3. The siren will chirp once then twice more to confirm the sensors are disabled.
4. Repeat for each arming cycle.

SIREN CHIRPS

1. One chirp - alarm is armed.
2. Two chirps - alarm is disarmed.
3. Three chirps on arm - a door, bonnet or boot is open.
4. Three chirps on disarm - the alarm has been triggered while you were away from the vehicle.
5. Continuous for 30 seconds - alarm is triggering.

THE SIREN

The AVS C3 has a standard siren.

The AVS C5 and AVS C4 alarm has a battery back-up siren. It is supplied with two keys that fit the switch on the top of the siren.

Turn the battery-back up siren off if you need to disconnect the car battery, if the car battery goes flat, or if using Emergency Disarm from an armed state. Remember to turn the siren back on.

Buy siren keys from www.avscarsecurity.com.

VALET MODE

This mode stops the alarm arming. It is useful if your vehicle is being serviced or repaired. In valet mode the alarm will chirp four times when the car is locked from the remote. It will not flash the LED or trigger from any zone.

To enter valet mode:

1. Turn the ignition on.
2. Push the LED override button seven times.
3. The LED will flash once to indicate the alarm is in valet mode.

To exit valet mode:

1. Push the LED override button seven times. The ignition can be on or off.

EMERGENCY DISARM

IMPORTANT. Emergency disarm can be used to disarm the alarm if the factory remote is not working. This is done using your alarm's 4-digit PIN being entered via the override LED button.

The unique 4-digit PIN for your alarm is recorded on the Emergency Disarm card supplied with this guide. Without it there is no way to disarm the alarm if the factory remote is not working. Please keep the card in a safe place.

Note: Emergency Disarm only disarms the AVS alarm. If your car has a factory immobiliser this may prevent the car from being started. In this case you will need to contact a locksmith.

If you do not know your PIN please call your installer or refer to www.avscarsecurity.com for more information.

AVS C-SERIES RANGE FEATURES

AVS C5 - digital tilt sensor, ultrasonic sensor, battery back-up siren, 3-year product warranty.

AVS C4 - ultrasonic sensor, battery back-up siren, 3-year product warranty.

AVS C3 - standard siren, 3-year product warranty.

More information and warranty details can be found at www.avscarsecurity.com.