



ALARM QUICK START GUIDE

AVS 3010 RANGE: 3010+, 3010, KE

Version: Generation 3

A full owner's manual is free to download from our website or scan the QR code.



0800 438 862 or 09 476 8052
www.avscarsecurity.com

AVS 3010+ AND AVS 3010

OPERATING THE ALARM



ARMS the alarm and locks the doors. The siren will chirp once.



DISARMS the alarm and unlocks the doors. The siren will chirp three times.



Blue button. Press to activate **PANIC**. Press  to turn off.



Green button. Press for **BOOT RELEASE** if installed. The indicators will flash five times.

SIREN CHIRPS

1. One chirp - alarm is armed.
2. Three chirps - alarm is disarmed.
3. Four chirps on arm - a door, bonnet or boot is open.
4. Continuous for 30 seconds - alarm is triggering.
5. AVS 3010+ - Continuous but won't respond to disarm - car battery is likely flat (see The Siren).

THE SIREN

The AVS 3010 alarm has a standard siren.

The AVS 3010+ alarm has a battery back-up siren. It is supplied with two keys that fit the switch on the top of the siren.

Turn the battery-back up siren off if you need to

disconnect the car battery, if the car battery goes flat, or if using Emergency Disarm from an armed state. Remember to turn the siren back on.

Buy siren keys from www.avscarsecurity.com.

EMERGENCY DISARM

IMPORTANT. Emergency disarm can be used to disarm the alarm if the remotes are not working. This is done using your alarm's PIN being entered via the ignition key.

1. Open the driver's door. The siren will sound.
2. Enter the car and close the door. If your car has interior light delay, wait until the light fades out.
3. Within 30 seconds turn the ignition from OFF to ON and back to OFF the number of times for your PIN code (5 times for the factory code) and leave in the OFF position.
4. Wait 30 seconds until the siren stops. If the code is correct the alarm will disarm. If the alarm does not disarm the code was entered incorrectly.

The code can be any number between 5 and 15. We recommend asking your installer to change it to enhance the security of the system. Please make a careful note of it if changed.

If you do not know your PIN and your remotes don't work please call your installer or refer to www.avscarsecurity.com for more information.

AVS KEYLESS ENTRY (KE)



LOCKS the doors.



UNLOCKS the doors.

THE REMOTES



The remotes are waterproof in normal use conditions.

Remote: AVS TX4-04 3010 waterproof

Batteries: 2x CR1616 per remote

Replace the batteries if the range decreases.

Buy remotes, remote cases and batteries from www.avscarsecurity.com. Batteries also available from electrical retailers.

AVS 3010 RANGE FEATURES

AVS 3010+ - dual stage shock sensor, battery back-up siren, dual immobilisers.

AVS 3010 - standard siren, dual immobilisers.

All models - waterproof remotes, 3-year product warranty.

More information and warranty details can be found at www.avscarsecurity.com.