



# **ALARM QUICK START GUIDE**

## **AVS S-SERIES RANGE: S5, S4, S3**

Version: Generation 2, V4

A full owner's manual is free to download from our website or scan the QR code.



**0800 438 862 or 09 476 8052**  
**[www.avscarsecurity.com](http://www.avscarsecurity.com)**

# OPERATING THE ALARM



**ARMS** the alarm and locks the doors. The siren will chirp once.

**DISARMS** the alarm and unlocks the doors. The siren will chirp twice.

**DISARMS** the alarm if the car is immobilised. The siren will chirp twice.



Press for 5 seconds to activate **PANIC**. Press again to turn off.



Press for 3 seconds to stop engine if optional on-board **TURBO TIMER** installed *or* press for 3 seconds for **BOOT RELEASE** if installed.



For use with the **AVS** garage door opener upgrade.

## SIREN CHIRPS

1. One chirp - alarm is armed.
2. Two chirps - alarm is disarmed.
3. Four seconds of chirps when arming - a door, bonnet or boot is open.
4. Four chirps on disarm - the alarm has been triggered while you were away from the vehicle.
5. Continuous for 30 seconds - alarm is triggering.
6. Continuous but won't respond to disarm - car battery is likely flat (see The Siren).

## THE REMOTES



The remotes are waterproof in normal use conditions.

**Remote:** AVS TX4-04 waterproof

**Batteries:** 2x CR1616 per remote

Replace the batteries if the range decreases or the remote's LED flashes when a button is held.

The alarm comes with two remotes unless using your car's factory key to operate the alarm (MAP). Then only one remote is supplied so you can disarm the alarm if the factory key stops working.

**Buy remotes, remote cases and batteries from [www.avscarsecurity.com](http://www.avscarsecurity.com).** Batteries also available from electrical retailers.

## THE SIREN



The AVS S5 and AVS S4 alarms have a data battery back-up siren. It is supplied with two keys that fit the switch on the top of the siren.

Record your 4-digit siren key number on the back of the PIN code card included.

Turn the siren off if you need to disconnect the car battery, if the car battery goes flat or if using PIN code disarm from an armed state. Remember to turn the siren back on. **Buy siren keys from [www.avscarsecurity.com](http://www.avscarsecurity.com).**

## **EMERGENCY DISARM**

**IMPORTANT.** Emergency disarm can be used to disarm the alarm if the remotes are not working. This is done using your alarm's 5-digit PIN being entered via the ignition key.

**The unique 5-digit PIN for your alarm is recorded on the PIN code card supplied with this guide. Without it there is no way to disarm the alarm if the remotes are not working. Please keep the card in a safe place.**

If you do not know your PIN please call your installer or refer to [www.avscarsecurity.com](http://www.avscarsecurity.com).

## **AVS S-SERIES RANGE FEATURES**

**AVS S5** - digital tilt sensor, intelligent glass break sensor, dual stage intelligent shock sensor, data battery back-up siren, AS/NZS 3749.1.2003 Class A Certified (Five Star).

**AVS S4** - intelligent shock sensor, data battery back-up siren, AS/NZS 3749.1.2003 Class B Certified (Four Star).

**AVS S3** - no siren or sensors, AS/NZS 4601.1999 Rev A Certified (Three Star).

All models - triple immobilisation, waterproof remotes, optional MAP control and turbo timer integration, 3-year product warranty.

More information and warranty details can be found at [www.avscarsecurity.com](http://www.avscarsecurity.com).